

JB99SI004 –07/15/2002


## Service Instruction for Removing Hard Drive from JB-99

1. Using a screw driver, remove 7 screws around the JB-99 and open the top cover .



Picture 1

2. Remove the three screws holding the hard drive to the case wall of JB-99.

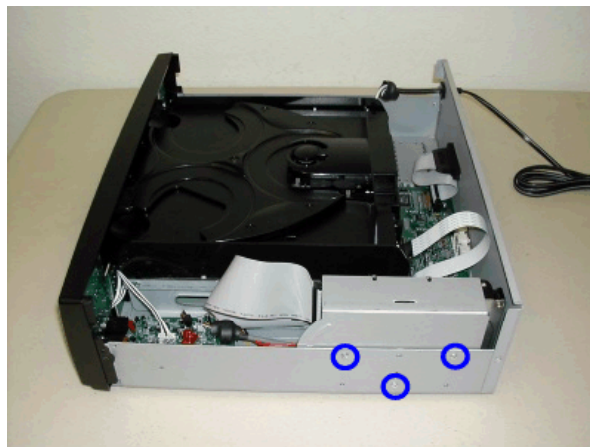

Picture 2

3. Remove the IDE cable and power cable from the hard drive.



Picture 3


4. Push the hard drive (with its case) gently in the direction of the blue arrow. The hard drive will become loose from its locked position in JB-99 with a click.



Picture 4

5. Remove the four screws to detach the hard drive from its case.

Note: It is not necessary to remove the hard drive from its case for IDE Transfer, as the IDE and power connectors of the hard drive are accessible with the case attached.

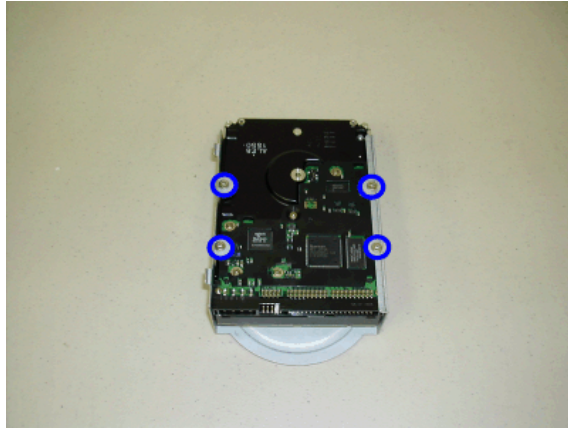

Picture 5

END